


About

This guide describes how to configure Allied Vision cameras for use via the Ethernet port on the Linux OS.

You can install VimbaViewer by following the following guide : [Vimba_installation_under_Linux](#)

1. Connect the camera, then go to the network settings

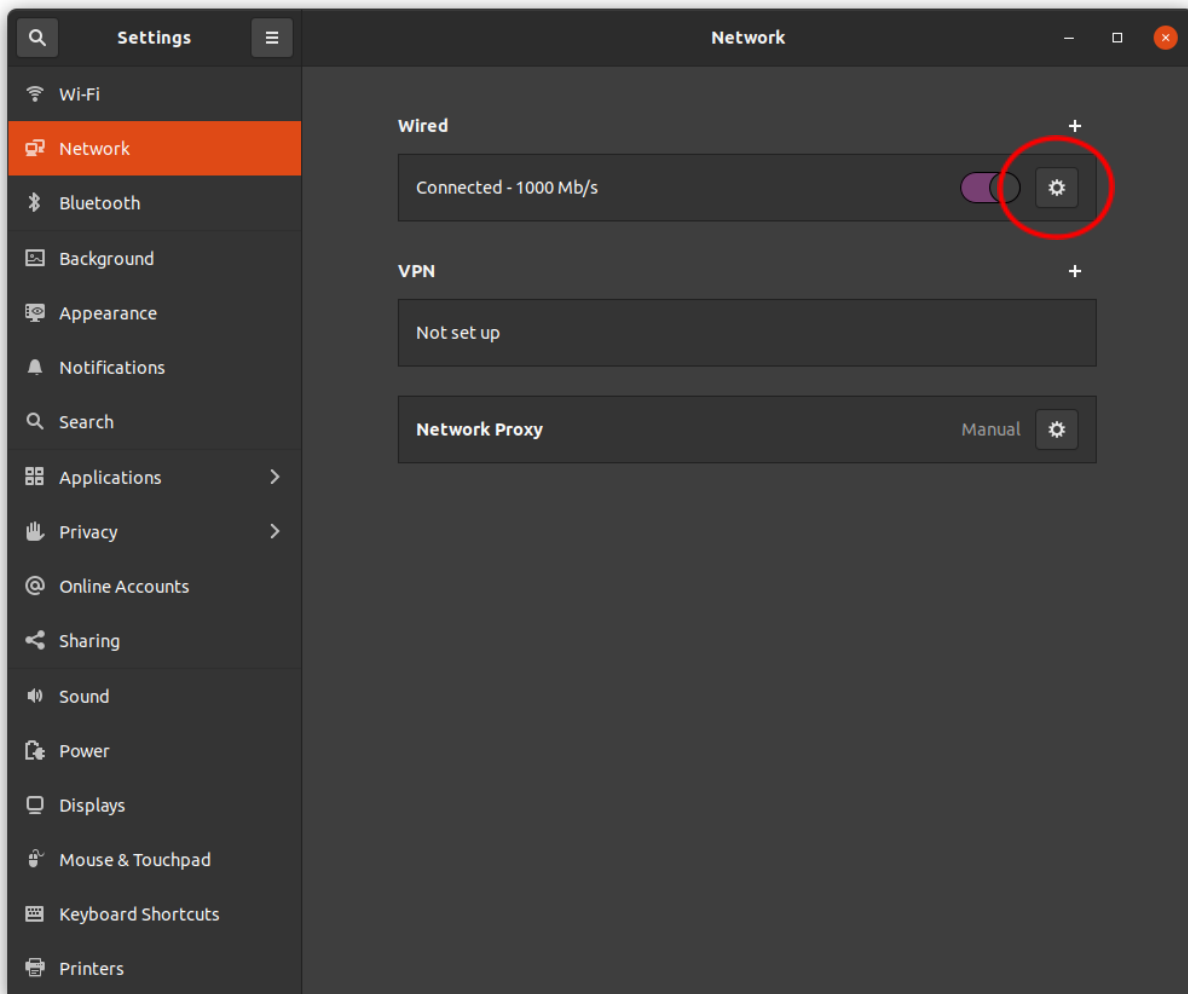

2. Configure the VPN : enter address and netmask

Cancel **Wired** Apply

Details Identity **IPv4** IPv6 Security

IPv4 Method

- ☐ Automatic (DHCP)
- ☒ Manual
- ☐ Shared to other computers
- ☐ Link-Local Only
- ☐ Disable

Addresses

Address	Netmask	Gateway
169.254.1.1	255.255.0.0	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>

3. Switch off DNS and Routes option

Cancel

Wired

Apply

DetailsIdentityIPv4IPv6Security

DNSAutomatic

Separate IP addresses with commas

RoutesAutomatic

AddressNetmaskGatewayMetric

×

☐ Use this connection only for resources on its network